





FOLDING INSTRUCTIONS

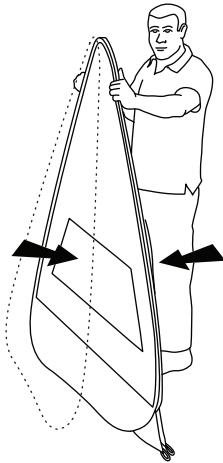


STEP ONE:

Standing to one side of the tent grab the opposite side and pull it towards you folding the tent flat.

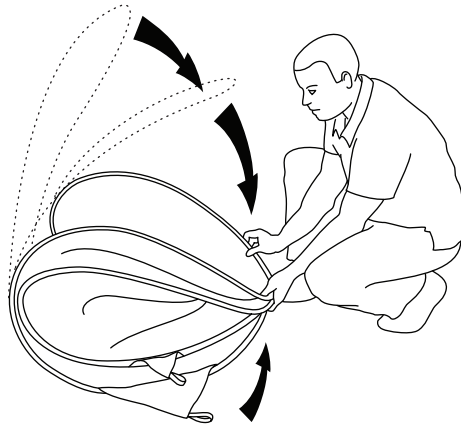


STEP TWO:

Fold tent in half toward you so that the top of the tent touches the bottom. With one hand, grab the top and bottom of the tent, making sure you get both pieces at the bottom. You should now be holding the tent between two loops.

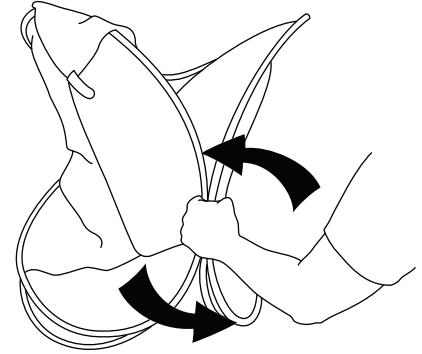


STEP THREE:

Pick up the tent and rotate it 90 degrees so that it is now sitting with one loop on top of the other.

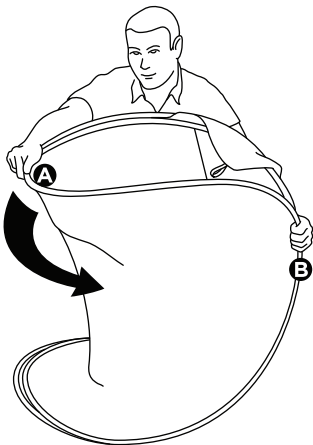

STEP FOUR:

Grab the top loop (A) with one hand while holding the side of tent with your other hand (B).

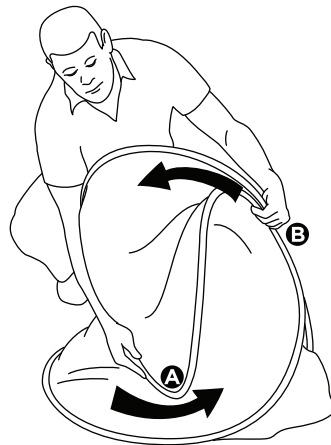

STEP FIVE:

Fold loop (A) down and under itself as your other hand (B) rolls over the top.



STEP SIX:

Release tent with your top hand (B) and allow the tent to slide over and collapse on top of itself.

Helpful Hints

Below are some simple instructions and helpful hints to help you enjoy many years with your new Shade Shack sun shelter.

Protection

Even though the Shade Shack has a rating of UPF 30 and blocks over 96 percent of the sun's rays it is still important to use proper sunscreens while out in the sun in order to prevent damage to your skin.

Practice

While the Shade Shack requires no assembly it may take you a couple of tries before you master the folding of it. This is normal. Before going out to the sun for the first time we suggest that you practice folding the tent 5 or 6 times to get used to it. Because of the 'pop-up' design of the Shade Shack it is very important that you allow yourself plenty of space when opening it – make sure the area is free of objects and people.

Surfaces

Your Shade Shack was not designed for use on rough surfaces such as asphalt or concrete as they can damage the material around the steel frame causing it to tear and fray. It is best to keep it on softer surfaces such as grass or sand. To anchor the Shade Shack you can scoop sand into the outside pockets if you're at the beach or use the included stakes on grass.

Frame

When folding your Shade Shack you should never force it into a position that it doesn't want to go. Doing so can cause the frame to develop a twist. If this happens don't worry – your tent is not ruined. You can easily fix this by tracing the frame from the top down to where the twist occurs and then using both hands twist it back into its original shape.